Model 7978

EZ-TORCH®

PORTABLE MINI TORCH

- Electronic Ignition
- Portable
- Up to 2375° F
  1300° C
- Wind proof and
  Weatherproof Flame

A MUST FOR:

- Tool Kits
- Camping
- Survival Kits
- Household
- Laboratories

EZ-TORCH

PORTABLE MINI TORCH

Approximately 20 minutes of continuous use (per cartridge)

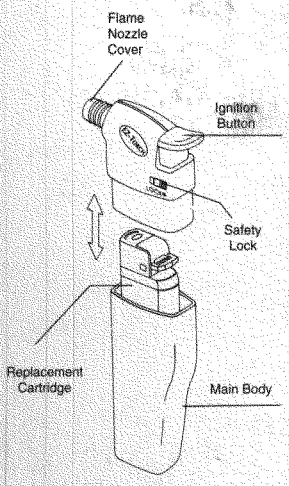

WARNING: This product, when used for soldering and similar applications, is likely to produce fumes or gases which contain chemicals known to the State of California to cause cancer and birth defects (or other reproductive harm).

WARNING:

- Read all instructions before use.
- Only use cartridges recommended by Wahl. Wahl Iso-Tip and Century cartridges have been tested for safety.
- Keep out of reach of children.
- Keep Unit away from face, body and combustible material when lighting and during use.
- Do not ignite or use near an open flame, heater, furnace, or combustible material.
- Use in well ventilated area.
- Do not touch the stainless steel nozzle cover during use,or before sufficient time has passed for cooling.
- Always be sure the unit is cool, that the safety switch is set to the "locked" position, and that the cartridge is removed, before storing.
- Do not store in temperatures over 104°F or 40°C (Such as in a car in hot weather) and avoid prolong exposure directly to the sun.
- Do not discard into fire of incinerator.
- Do not attempt to readjust or repair, the unit is not user serviceable.

CAUTION: The torch flame is almost invisible in daylight, or in strong light.

INSTRUCTIONS:

- Remove upper body (refer to diagram).
- Place cartridge into main body. Wahl, Iso-Tip or Century cartridges have been tested and approved
- Firmly attach upper body.
- Switch safety lock to the unlocked position.
- Press the ignition button. (If no flame
- appears, adjust the regulator on the cartridge and press the ignition button again.)
- As the gas in the fuel cell is consumed, the regulator will need to be adjusted periodically to ensure proper flame.
- To turn off, release the ignition button. (There will be a short delay before the flame is completely extinguished.)
- Switch safety lock to the locked position.
- When not in use, remove cartridge
- Warranty 1 year from date of purchase.

ETL LISTED